

Fig. 1

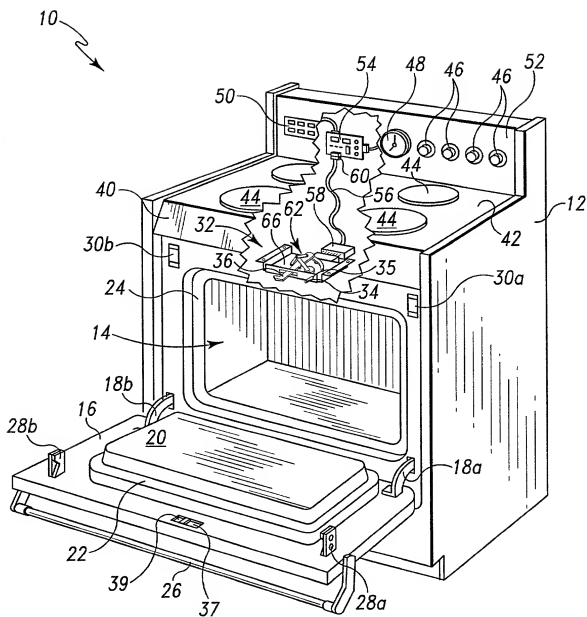 


Fig. 2

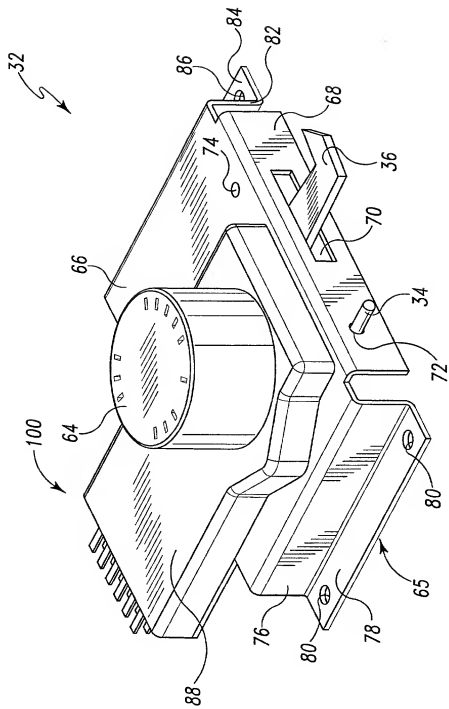 


Fig. 3

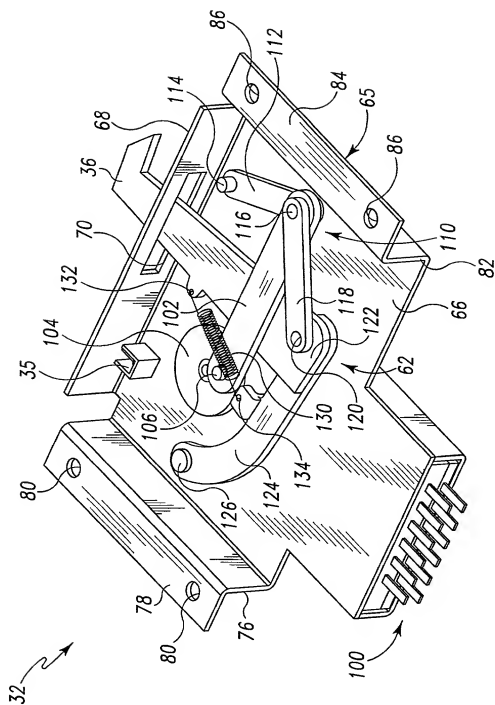 


Fig. 4

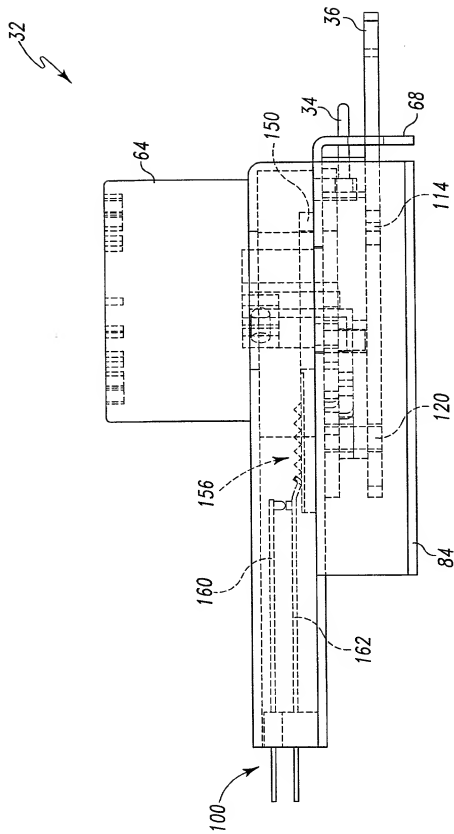 


Fig. 5

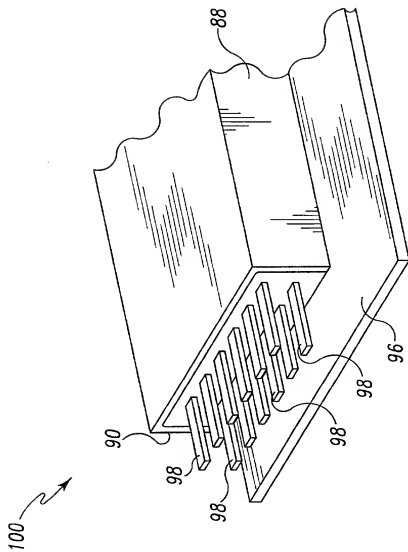 


Fig. 6

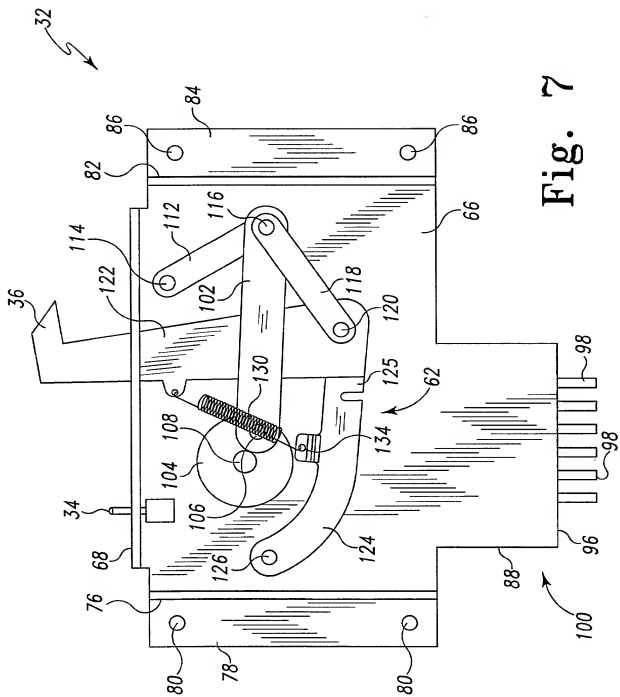 


Fig. 7

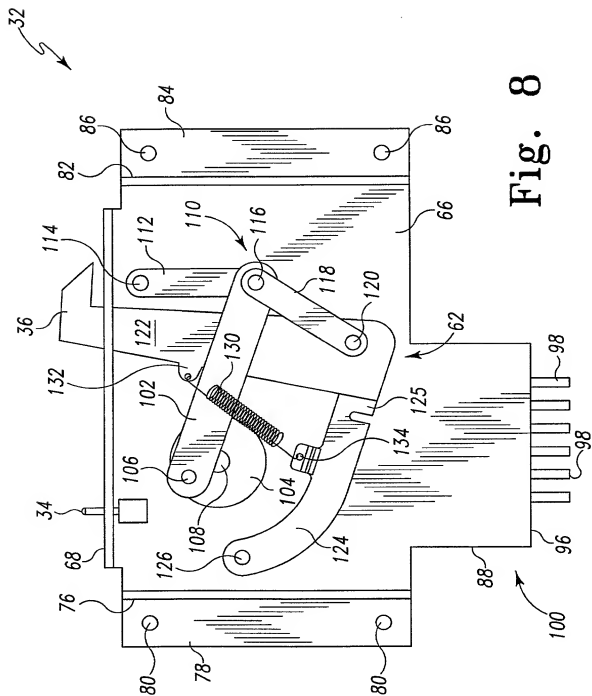 


Fig. 8



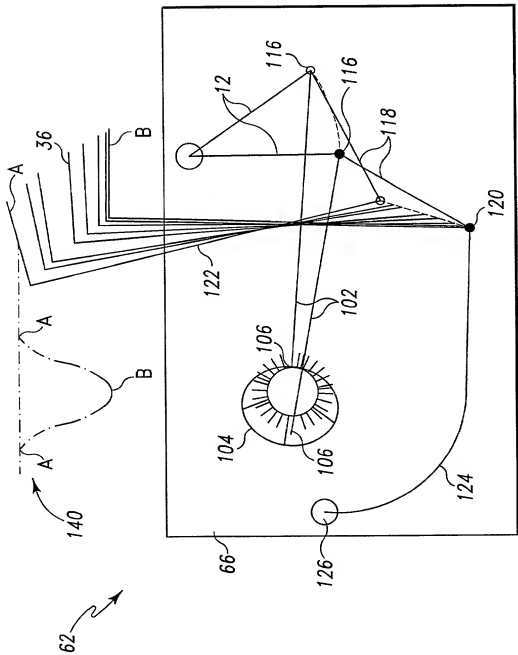 


Fig. 9

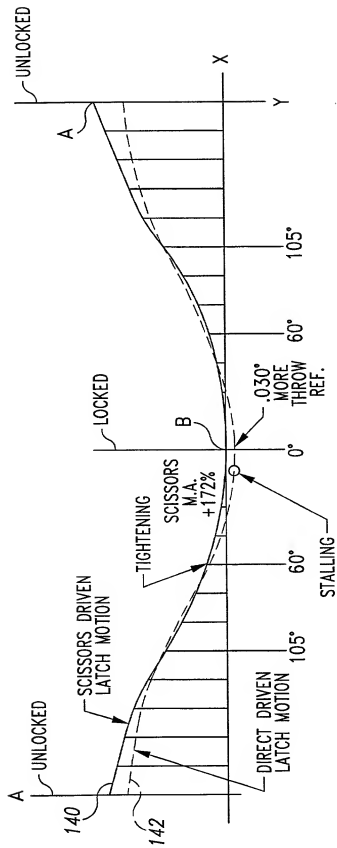 


Fig. 10

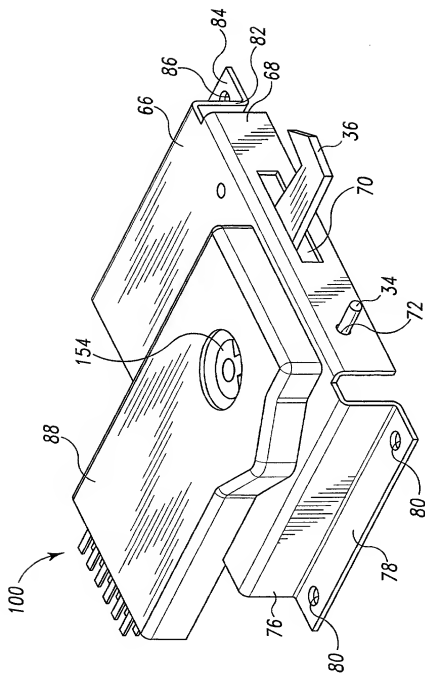 


Fig. 11

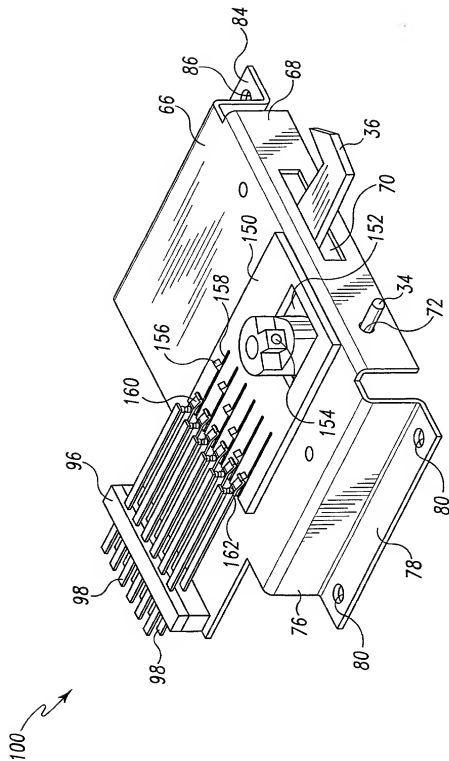 


Fig. 12

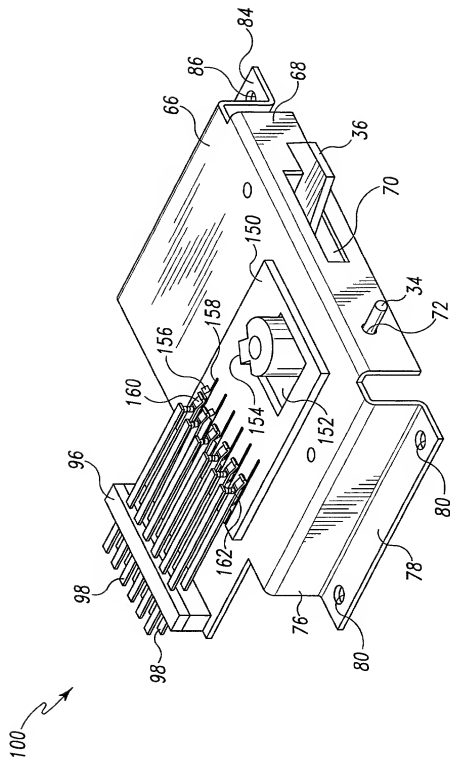 


Fig. 13

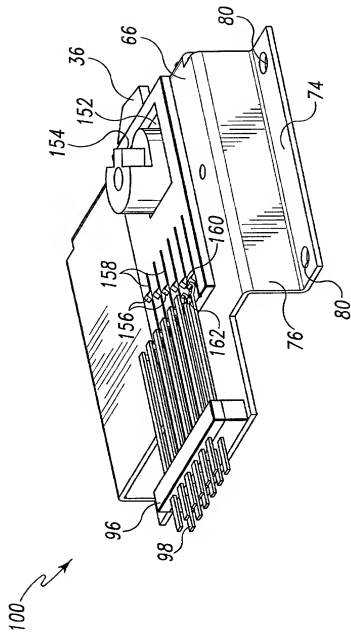 


Fig. 14

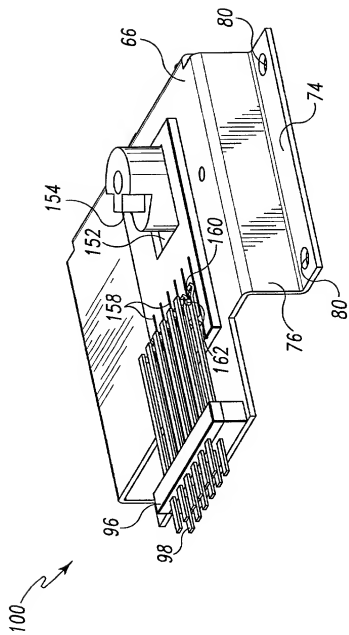 


Fig. 15

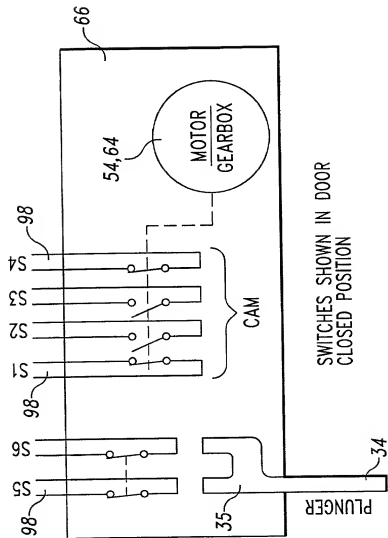 


Fig. 16



 
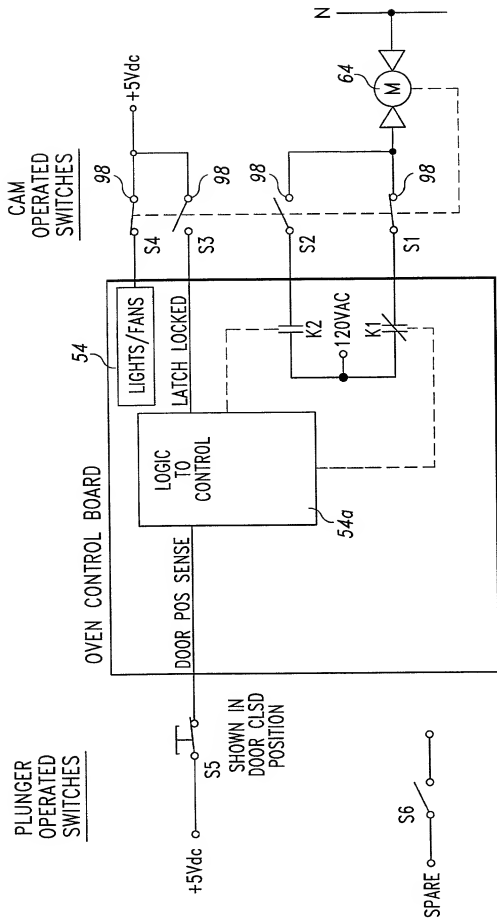 


Fig. 17

Fig. 18

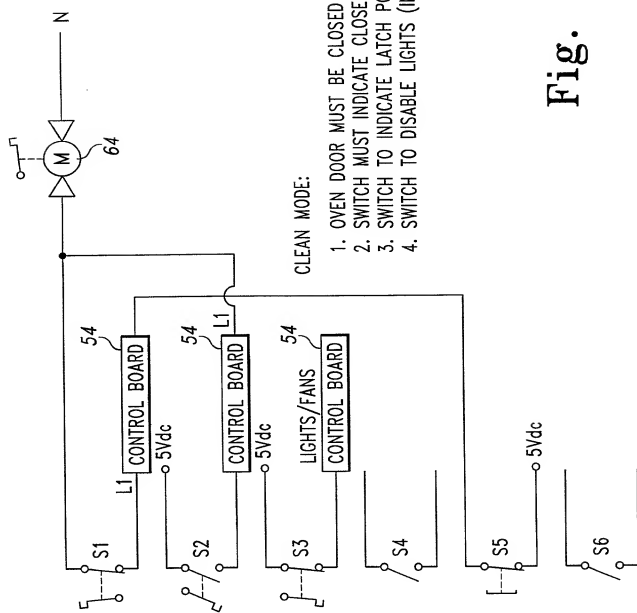

CLEAN MODE:

1. OVEN DOOR MUST BE CLOSED
2. SWITCH MUST INDICATE CLOSED/OPEN DOOR POSITION (LOW VOLTAGE)
3. SWITCH TO INDICATE LATCH POSITION - LOCKED/UNLOCKED
4. SWITCH TO DISABLE LIGHTS (INCANDES. OR HALOGEN OR OTHER)

Fig. 19

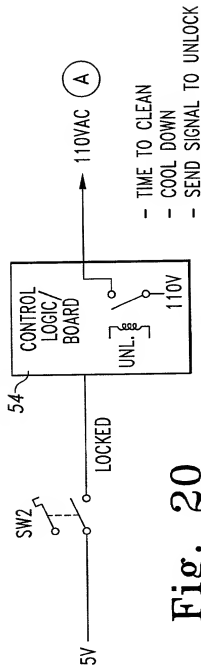 


Fig. 20

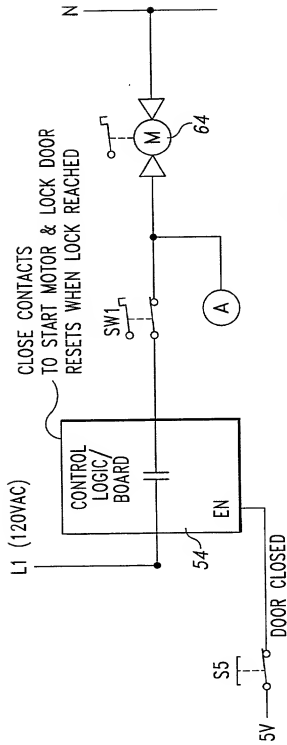 


Fig. 21

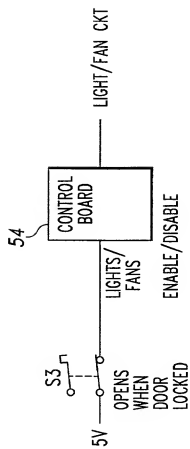 


Fig. 22

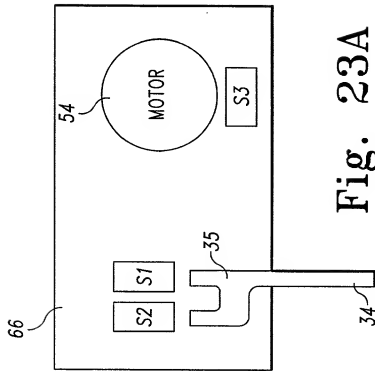 


Fig. 23A

**S1 - SWITCH CONTACTS TO CLOSE WHEN  
OVEN DOOR IS CLOSED**

**S2 - SWITCH CONTACTS TO CLOSE WHEN  
OVEN DOOR IS CLOSED**

**S3 - SWITCH CONTACTS CLOSE WHEN  
IN LOCK (CLEAN MODE) POSITION**

Fig. 23B